

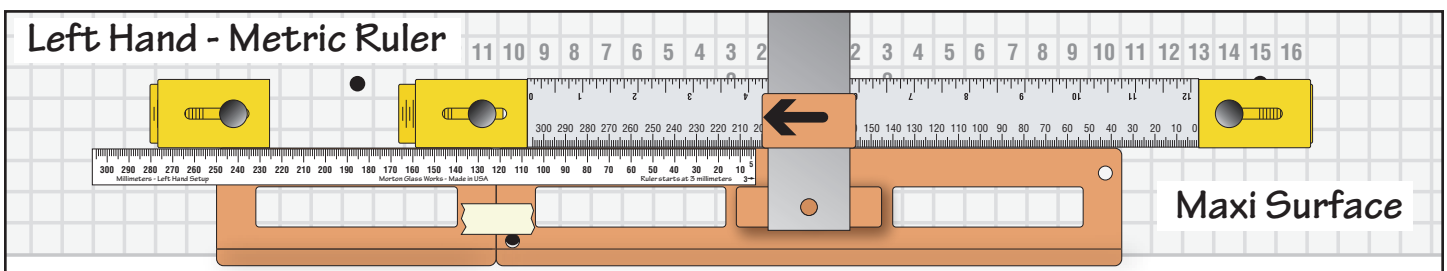
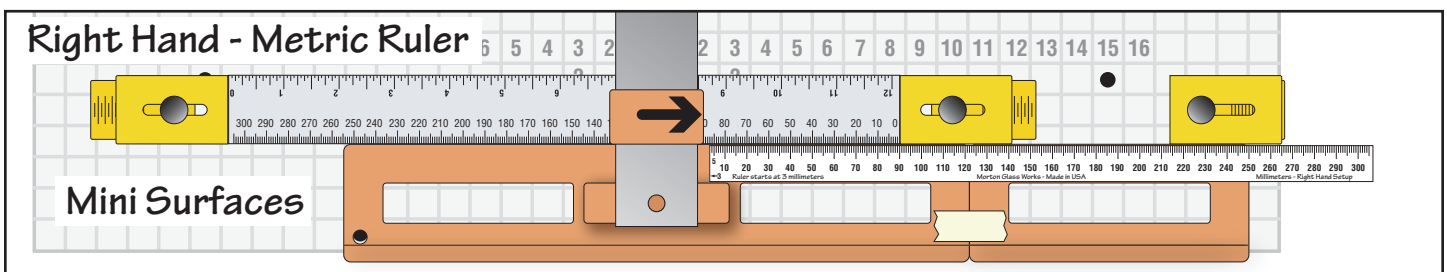
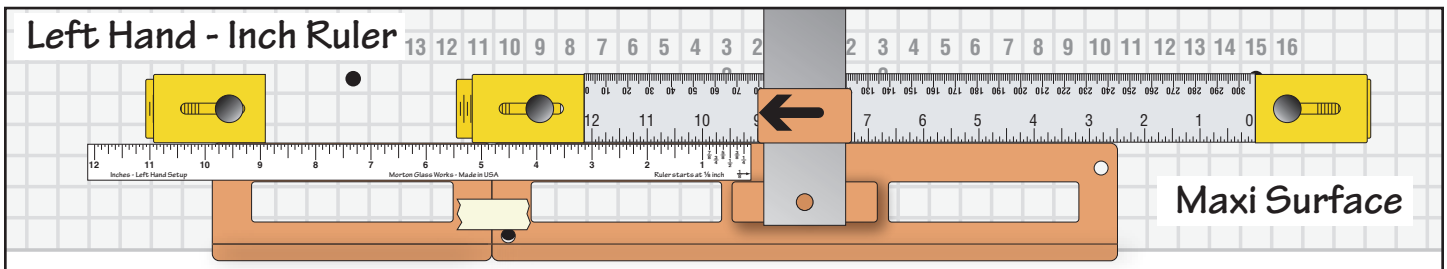
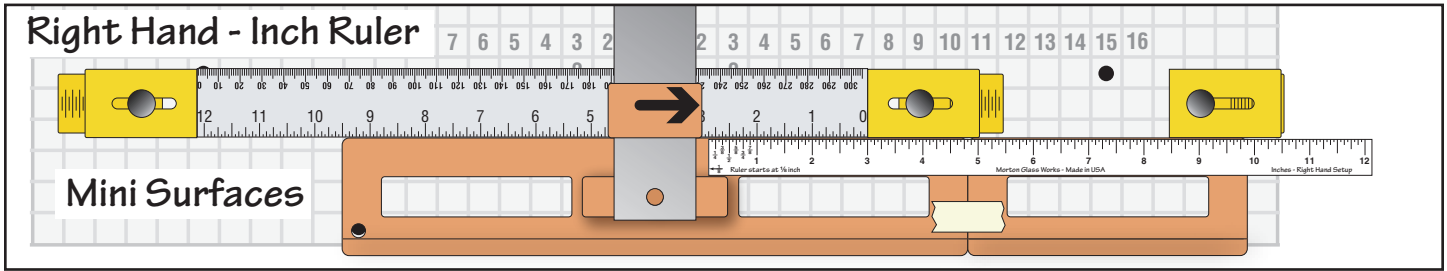


• The Fence Extension is used the same on both Mini and Maxi Surfaces. You have different options and you should try them all. You will need masking tape and


some double stick tape. Page 2 has standard install steps that you can apply to your preferred options. Rulers will hang over the side on both Mini Surfaces.

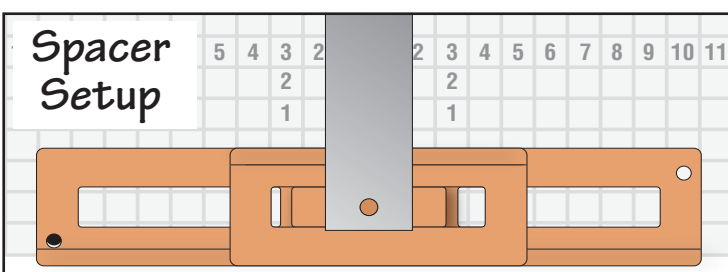

**PGO1B** ACCESSORY  
metric - inches

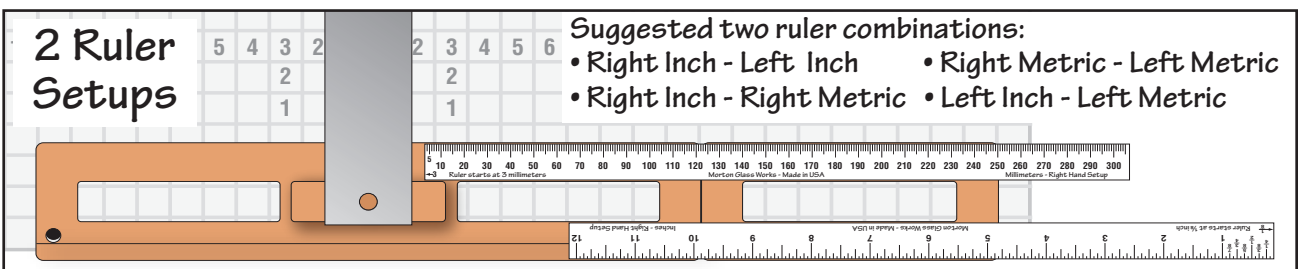


• The Fence Extension can be used as a spacer to increase the thickness of the Squaring Fence. This option is helpful when working with plate glass or the new double thick glass from Spectrum. By using or not using the bevel you will have two thickness options.

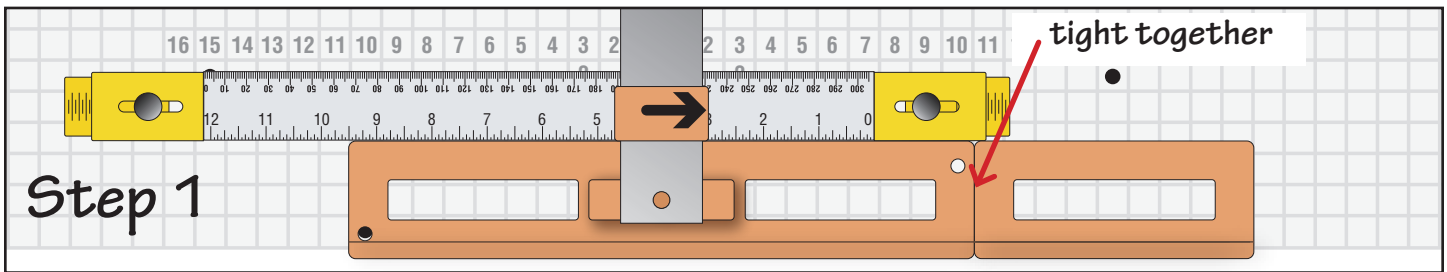

## Step 1

- Arrange the PGO1B in the standard 90° setup. Set the PGO1B ruler as shown. Be sure the ruler is


set on a full inch (numbered millimeter). Use Glass Stops to keep the ruler in position.

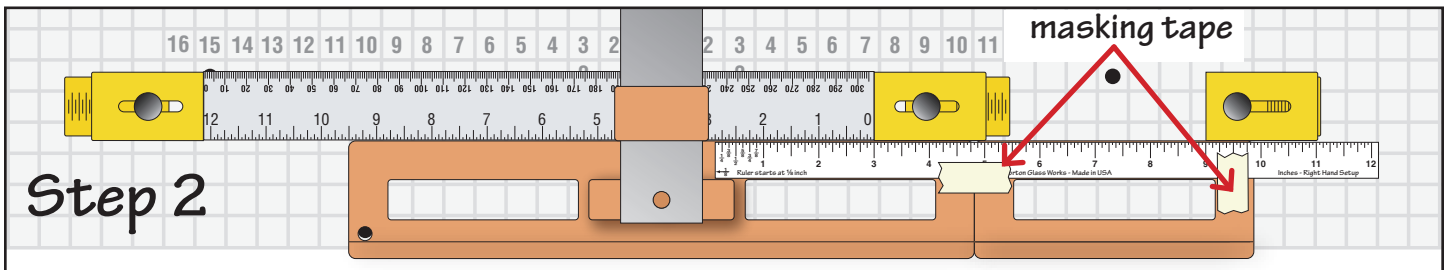

## Step 2

- Use the Glass Stops to help position the white plastic ruler. Line the ruler to the PGO1B ruler.


Hold the ruler in place with masking tape. You can use the ruler like this or continue to step 3.

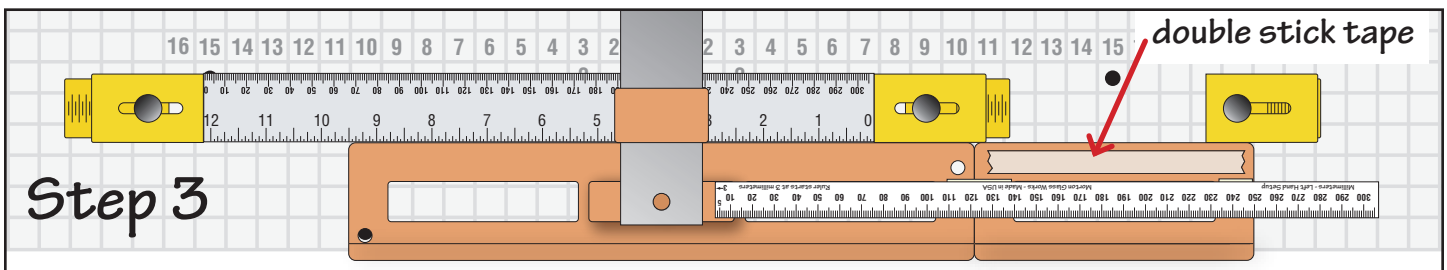

## Step 3

- Use the masking tape in step 2 as hinges and turn the ruler down out of the way. Next add a piece of


double stick tape to the fence extension as shown.

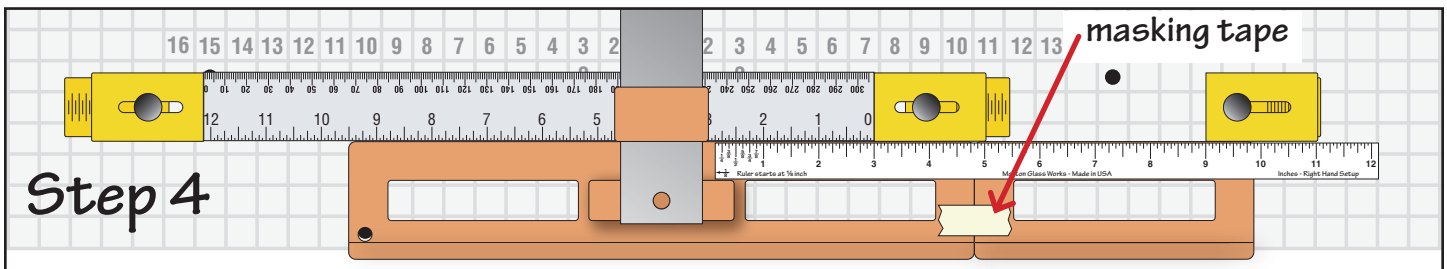

## Step 4

- Carefully turn the ruler over onto the tape. Be sure to keep the ruler slightly back from the front edge of

the fence and fence extension. You can add a piece of tape to hold the extension tight to the fence.

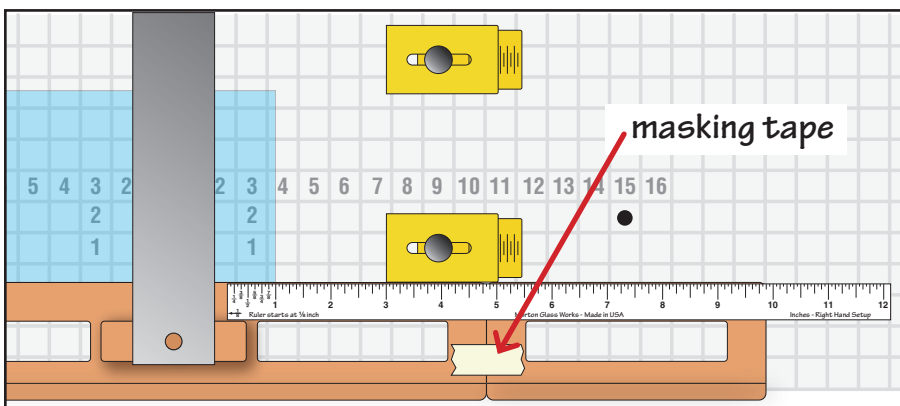

- The Fence Extension and ruler can now be used to size your glass or to set Glass Stops without using the regular ruler and cutter gauge. Once the ruler is attached to the Fence Extension the unit can easily be removed and replaced as needed. You must always push the Fence Extension tight to the Squaring Fence. A small piece of tape can assure the two stay tightly together.